


Foam Pad Hood (FPH) Dock Seal Installation Instructions

(Right or left — read from outside facing building)

- 1. DETERMINE CENTERLINE OF DOOR OPENING ON DOCK FLOOR AND POSITION OF FPH HOOD OUTER EDGES:** Take 1/2 of the hood width and mark this distance on both sides of the centerline of the door opening.
- 2. ATTACH MOUNTING BRACKETS TO SIDE PADS:** Attach three (3) pairs of brackets per pad using lag screws provided.
- 3. MOUNT SIDE PADS TO WALL:** Outside edge of side pads should be placed on mark with bottom of backing flush with dock floor. Be sure pads are plumb from top to bottom.
- 4. MOUNT 2X4 HEAD FRAME TO WALL:** Top of 2X4 placed 4" above top of door opening and flush with outside edge of side pads.
NOTE: Three (3) anchors recommended—one middle and one near each end.
- 5. INSERT STEEL TUBE IN HOOD**
- 6. FASTEN HOOD TO HEAD FRAME AND OUTSIDE EDGE OF SIDE PADS:** Galvanized roofing nails are provided and should be fastened approximately 6" apart.
- 7. CAULK BETWEEN HEAD FRAME AND WALL:** Outside edges only. A silicone or butyl rubber caulk is recommended.

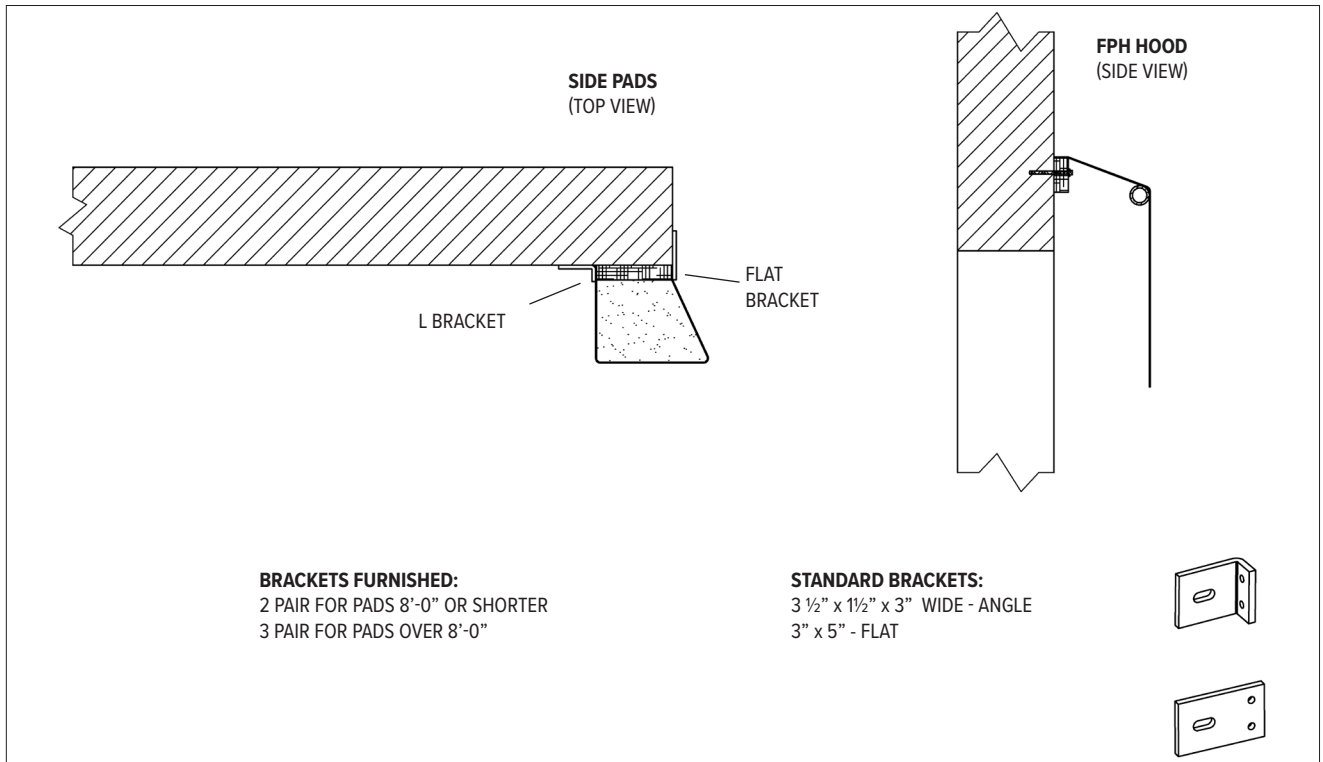

SUGGESTED MOUNTING METHODS

(Mounting anchors not included)


CONCRETE BLOCK OR BRICK WALL: Try to hit mortar joints. Use 1/2" or 3/8" x 4" expansion anchors. Use through bolt fastening (minimum 2 per frame member) if anchors will not hold—3/8" threaded rod is recommended.

PRECAST CONCRETE: Same as above.

METAL SKIN BUILDING: Through bolt fastening as above. Use a back-up plate (steel or wood) to support bolts, or anchor through existing building girt or purlin when possible.

Foam Pad Hood (FPH) Dock Seal Installation Instructions

FPH-SERIES TYPICAL ARRANGEMENT

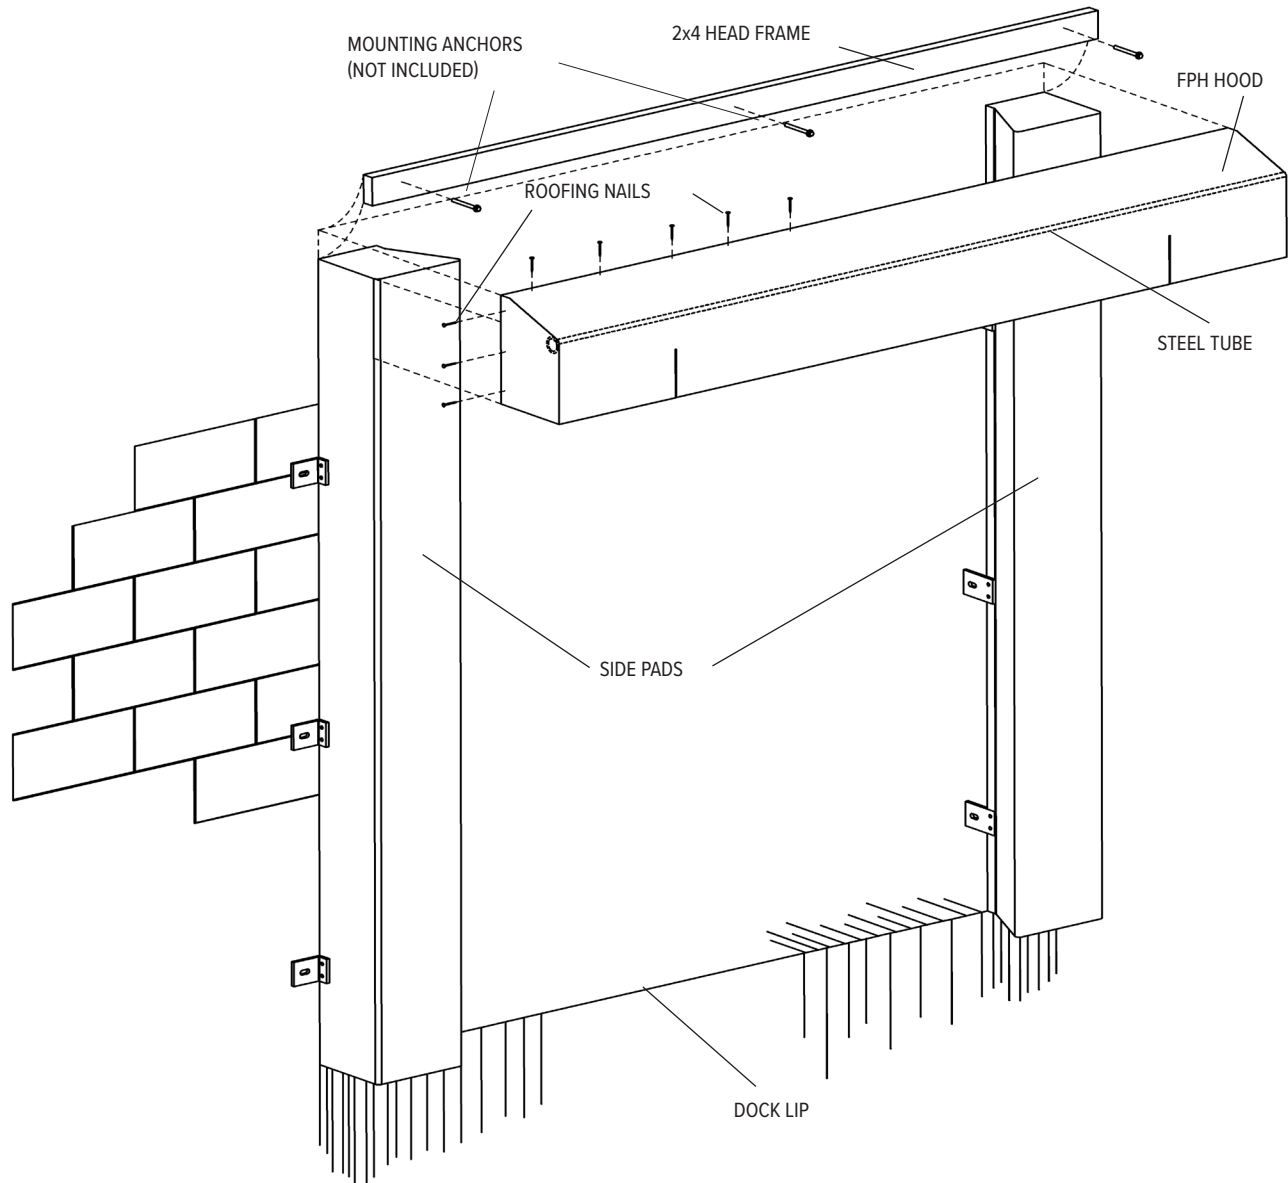

W194N11481 McCormick Dr. | Germantown, WI 53022
poweramp.com | sales@poweramp.com
800-643-5424

*Let Poweramp help you find the best
solution for your operation.*



poweramp.com

Designed, Engineered, and Manufactured in the U.S.A.
© 2025 Systems, LLC/Poweramp
Consistent with our policy of continuing product improvement, we reserve the right to
change product specifications without notice or obligation.

INSTALL INSTCNS FPH 07/2025

A Division of Systems, LLC

POWERAMP
Premium Loading Dock Systems